

- HT730 Android Handheld Terminal -



Quick Start Guide

608955G V1.0

Package

Please make sure the following contents are in the HT730 gift box. If something is missing or damaged, please contact your unitech representative.

The package contents

- HT730 Terminal with bumper
- Battery
- Hand Strap
- Quick Start Guide
- Regulatory Compliance Statements


Optional accessories

- USB Type C Cable
- Terminal Power Adapter
- Glass Screen Protector
- 1-slot Terminal & Battery Charging Cradle + Adapter
- 1-slot Ethernet & Battery Cradle + Adapter
- 1-slot USB & Battery Cradle + Adapter

Product View



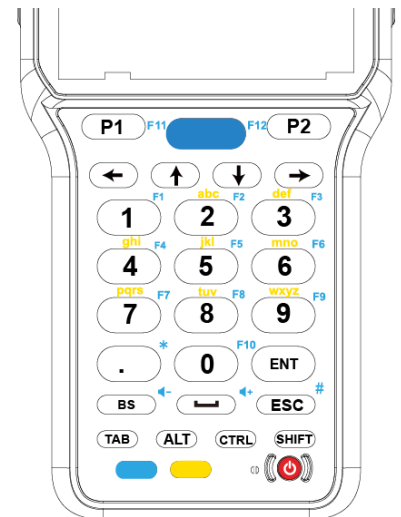

Keypad View





①	Scanner Window	⑥	Receiver
②	13m Camera & LED Flash Light	⑦	Pogo pin
③	LED Indicator	⑧	USB Type C Port
④	Scanner Trigger Key	⑨	Battery Release Latch
⑤	Keypad	⑩	Battery Cover

Install The Battery and The Battery Cover

- Slide and position the battery pack, making sure the battery contacts are aligned with the contacts in the battery compartment. Make sure the battery release latch is in the unlocked position. 
- Insert the battery cover up to 45 degrees (45°), from bottom to top. Press the battery cover down to secure in place and then slide the battery release latch to the locked position. 

Remove The Battery Cover and The Battery

- Make sure the battery release latch is in the unlocked position.
- Grab the battery cover from the two recesses and lift gently upward to remove the battery cover. 
- Pull the pull tab in the battery compartment to remove the battery. Make sure the pull tab stays inside of the battery compartment when closing the cover. 

Charging the battery

Using the terminal for the first time, you need to charge it for about 24 hours. For the regular use, you can charge the terminal with the USB type-C cable. Connect the type C USB cable to the USB port on HT730, and connect the other end of the USB cable to AC power adapter. Then plug into the electrical outlet.

It is highly recommended that using the unitech USB type-C cable and AC power adapter to charge the terminal.

Inserting Micro SD/ Nano SIM Card



SIM 1 & 2 Card Slot

Push down SIM card holder to unlock and lift the card holder to insert SIM card. Close the card holder and slide up to lock position. Ensure that it is installed properly.



MicroSD Card Slot

Push up MicroSD card holder to unlock and lift the card holder to insert MicroSD card. Close the card holder and slide down to lock position. Ensure that it is installed properly.



Checking LED Status

LED	Description
Red Light	<ul style="list-style-type: none"> Battery Charging Twinkling to indicate battery low status (less than 15%)
Green Light	<ul style="list-style-type: none"> Battery Fully charged Barcode scan good read
Blue Light	Message
No LED (Red and Green) display when battery is out (even AC IN)	

For other product documentation, please scan the QR code below for more information.



WARNING! There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.

CAUTION!

- To ensure the unit working properly, please keep all connectors away from the contaminants staying inside of them such as dust, grease, mud, and water. The negligence may cause the unit with no communication, short circuited, overheated and so on.
- If the connector is damaged, please ensure the connector is being fully repaired before using the unit to avoid causing short circuited.