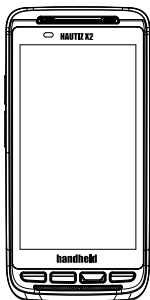# NAUTIZ X2

QUICK START GUIDE

handheld

① WHAT´S IN THE BOX

The pictures shown below may differ from the actual products. To purchase additional or optional products, contact our customer center.

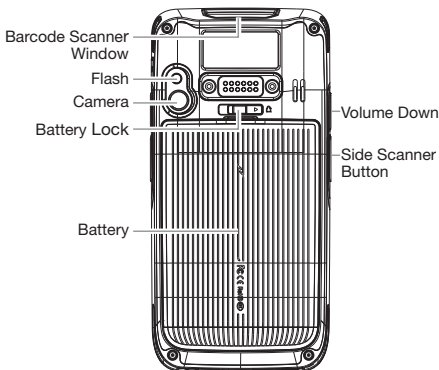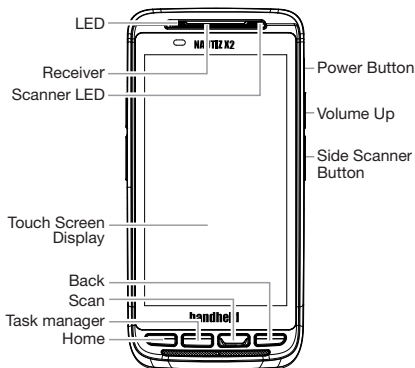Nautiz X2 Main Body

Standard Battery
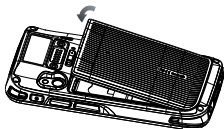
Charging Dock

USB Cable

Adaptor

② YOUR NAUTIZ X2

LED

Receiver

Scanner LED

NAUTIZ X2

Power Button

Volume Up

Side Scanner Button

Touch Screen Display

Back

Scan

Task manager

Home

handheld

Barcode Scanner Window

Flash

Camera

Battery Lock

Volume Down

Side Scanner Button

Battery

③ INSERT/REMOVE BATTERY

To insert the battery
1. Insert the battery.

2. Slide the battery lock to the right.
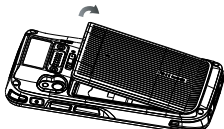
Battery door lock

To remove the battery
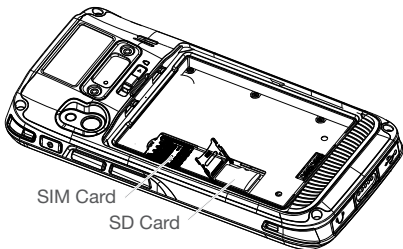1. Slide the battery lock to the left.

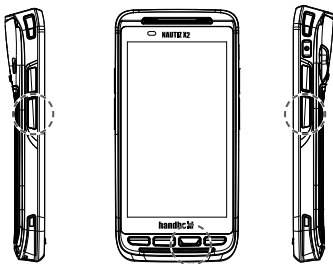Battery door unlock

2. Remove the battery.

④ INSERTING/EXTRACTING SIM/MICRO SD CARD

This is how you insert and remove the SIM/micro SD.

SIM Card

SD Card

⑤ USING SCANNER

Press the [Front Scan] or [Side Scan] button to start scanning.
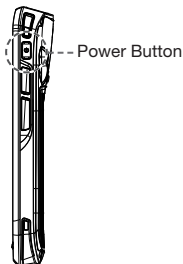

Scanning Barcode

To scan a barcode, keep a distance of about 10 cm between the barcode and the barcode scanner window and scan the barcode at the correct angle.

Correct Scan Angle   Incorrect Scan Angle

⑥ POWERING ON/OFF

Press the [Power] button to turn the Nautiz X2 unit on/off.

Power Button

⑦ BATTERY CHARGING

Use supplied power adapter or charging dock to charge the Nautiz X2.

Please go to www.handheldgroup.com/knowledgebase to download more information.

Nautiz X2 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at www.handheldgroup.com/nautiz-x2/#tab=manuals

handheld

www.handheldgroup.com