



DataMan[®] 150 Series

Quick Reference Guide

2020 June 24
Revision: 6.2.0.2




Precautions

To reduce the risk of injury or equipment damage, observe the following precautions when you install the Cognex product:

- This device requires the use of an LPS or NEC class 2 power supply.
- Do not connect or disconnect this device from the I/O module or 15-pin USB adapter cable when the I/O module or adapter cable is connected to a PC.
- Route cables and wires away from high-current wiring or high-voltage power sources to reduce the risk of damage or malfunction from the following causes: over-voltage, line noise, electrostatic discharge (ESD), power surges, or other irregularities in the power supply.
- Changes or modifications not expressly approved by the party responsible for regulatory compliance could void the user's authority to operate the equipment.
- Ensure that the cable bend radius begins at least six inches from the connector. Cable shielding can be degraded or cables can be damaged or wear out faster if a service loop or bend radius is tighter than 10X the cable diameter.
- This device should be used in accordance with the instructions in this manual.
- All specifications are for reference purposes only and can change without notice.

Product Overview

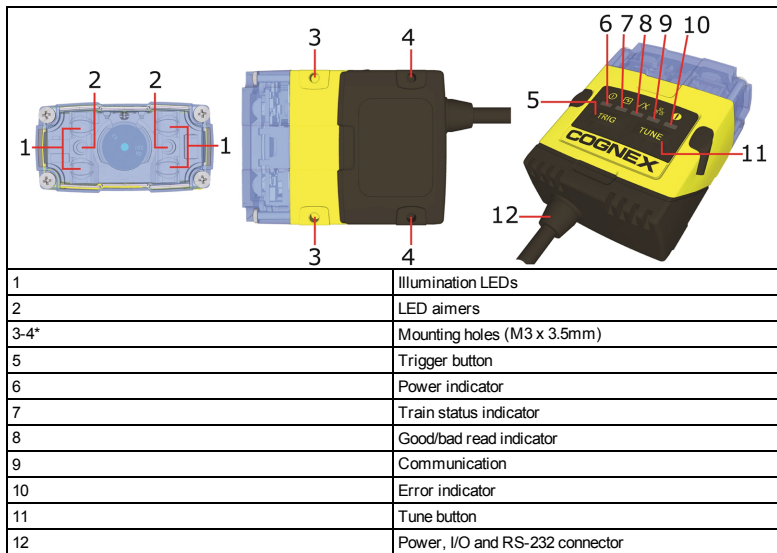


















Note: *Use only one set of mounting holes (either 3 OR 4) for mounting.

Note: The five status LEDs together also function as a peak meter using an orange light.

DataMan 150 Accessories

LENS OPTIONS, COVERS, ILLUMINATIONS AND FILTERS

Accessory Name	Accessory Number	Accessory Image
6.2 mm lens kit	DM150-LENS-62	
IR 6.2 mm lens kit, 3 -position with IR LED	DMA-KIT-IR-62	
IR 16 mm lens kit	DMA-KIT-IR-16	
16 mm lens with extended optics mount (requires the use of an extended front cover and high-powered red LED)	DM260-LENS-16	
UV Light Kit for 6.2 mm lens (365nm)	DMA-KIT-UV365-62	
Liquid Lens Module (LLM) to be used with 6.2 mm lens or 16 mm lens	DMA-LLM-150-260	
ImageMax kit	DM260-KIT-16LL	
Clear lens cover*	DM150-CVR-CLR	
Clear lens cover, ESD safe*	DM150-CVR-ESD	
Polarized front cover*	DM260-LENS-62CVR-F***	
Extended lens cover, un-polarized** Extended lens cover, half-polarized ** Extended lens cover, fully polarized**	DM260-LENS-16CVR*** DM260-LENS-16CVR-P*** DM260-LENS-16CVR-F***	
C-mount adaptor, IP40	DM260-CMNT-00	

C-mount adaptor, IP65	DM260-CMNT-CVR	
Blue bandpass filter	DM150-BP470	
Red bandpass filter	DM150-BP635	
Red LED illumination* White LED illumination* Blue LED illumination*	DM150-LED-RED DM150-LED-WHT DM150-LED-BLU	
High Powered red LED illumination**	DM260-LED-RED-HP	














Note: *Use with a 6.2 mm lens only!

**Use with a 16 mm lens only!

***ESD safe

CABLES AND OTHER

5-meter extension cable*	DM100-EXTCBL-000	
RS-232/USB adapter connector	DM100-PATCH-000	
USB adapter cable with power tap USB adapter cable with power tap	DM100-USB-000 DM100-USB-030	
USB & Flying Leads I/O Cable, 2.0 m	DM-USBIO-00	
RS-232 & Flying Leads I/O Cable, 2.5 m	DM-RS232IO-00	
RS-232 adapter cable with power tap	DM100-RS232-000	
Flying Leads Connection Cable, 5 m	DM50-PWRIO-05	
Power supply, 6V	DM100-PWR-000	
Universal Mounting Bracket	DM100-UBRK-000	


Pivot Mounting Bracket	DM100-PIVOTM-00	
DataMan Basic I/O Module	DM100-IOBOX-000	

Note: *USB/RS-232 extension connection is possible with the following limitations:




1. The USB connection is shorter than 5 m.
2. Serial connection is shorter than 15 m.

Dimensional Drawings

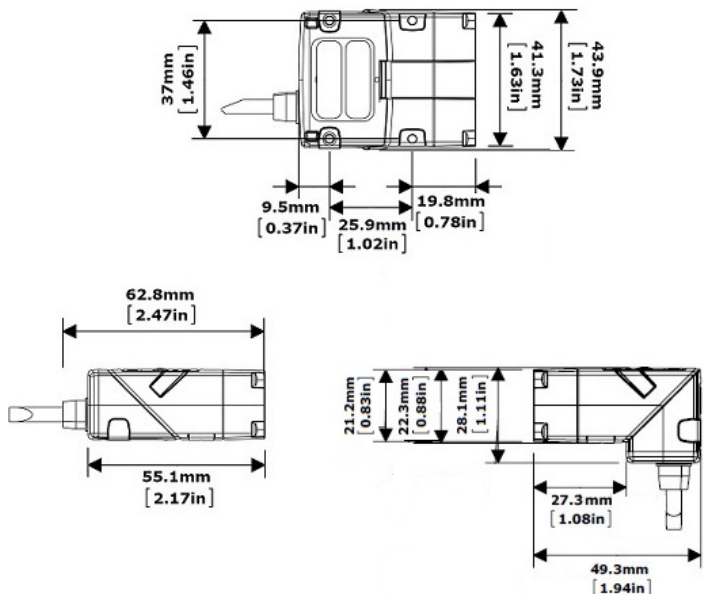

Field of View and Reading Distances

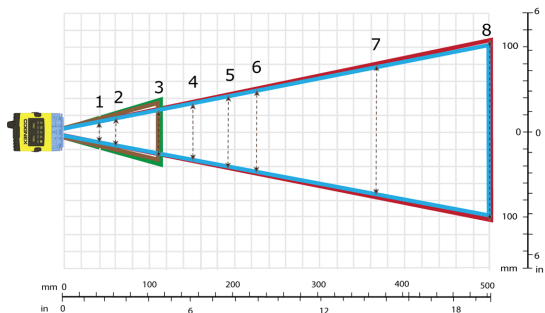

Horizontal Field of View values


1	2	3	4
DM150 Short Range: 34 mm [1.3 in]	DM150 Short Range: 50 mm [1.9 in]	DM150 Short Range: 77 mm [3.0 in]	DM150 Long Range: 115 mm [4.5 in]
DM152 Short Range: 37 mm [1.45 in]	DM152 Short Range: 56 mm [2.2 in]	DM152 Short Range: 87 mm [3.4 in]	DM152 Long Range: 123 mm [4.8 in]
5	6	7	8
DM150 Long Range: 144 mm [5.6 in]	DM150 Long Range: 170 mm [6.7 in]	DM150 Long Range: 279 mm [10.9 in]	DM150 Long Range: 370 mm [14.5 in]
DM152 Long Range: 153 mm [6.0 in]	DM152 Long Range: 181 mm [7.1 in]	DM152 Long Range: 297 mm [11.7 in]	DM152 Long Range: 394 mm [15.5 in]

Vertical Field of View values

1	2	3	4
DM150 Short Range: 22 mm [0.86 in]	DM150 Short Range: 32 mm [1.25 in]	DM150 Short Range: 49 mm [1.9 in]	DM150 Long Range: 73 mm [2.8 in]
DM152 Short Range: 28 mm [1.1 in]	DM152 Short Range: 42 mm [1.65 in]	DM152 Short Range: 65 mm [2.5 in]	DM152 Long Range: 92 mm [3.6 in]
5	6	7	8
DM150 Long Range: 92 mm [3.6 in]	DM150 Long Range: 108 mm [4.25 in]	DM150 Long Range: 178 mm [7.0 in]	DM150 Long Range: 236 mm [9.2 in]
DM152 Long Range: 115 mm [4.5 in]	DM152 Long Range: 135 mm [5.3 in]	DM152 Long Range: 223 mm [8.7 in]	DM152 Long Range: 295 mm [11.6 in]

Device	Distances in mm/ 2D min. code 6.2 mm lens Long Range		Distances in mm/ 1D min. code 6.2 mm lens Long Range	
DM150	150	12 MIL	150	6 MIL
	190	15 MIL	190	10 MIL
	225	18 MIL	225	10 MIL
	375	30 MIL	375	15 MIL
	500	35 MIL	500	20 MIL
	1000	80 MIL	1000	35 MIL
DM152	150	10 MIL	150	5 MIL
	190	12 MIL	190	6 MIL
	225	15 MIL	225	6 MIL
	375	20 MIL	375	10 MIL
	500	25 MIL	500	15 MIL
	1000	50 MIL	1000	30 MIL

Device	Distances in mm/ 2D min. code 6.2 mm lens Short Range		Distances in mm/ 1D min. code 6.2 mm lens Short Range	
DM150	40	4 MIL	40	2 MIL
	65	5 MIL	65	3 MIL
	105	10 MIL	105	6 MIL
DM152	40	3 MIL	40	2 MIL
	65	4 MIL	65	2 MIL
	105	7 MIL	105	5 MIL

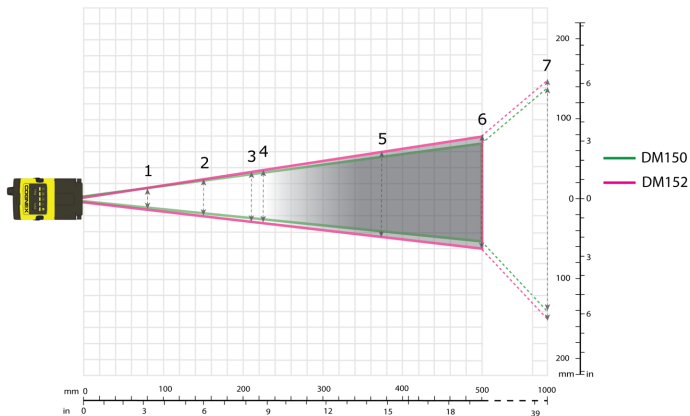

Horizontal Field of View values

1	2	3	4	5	6	7
DM70: 22 mm [0.87 in]	DM70: 43 mm [1.7 in]	DM70: 54 mm [2.1 in]	DM70: 64 mm [2.5 in]	DM70: 106 mm [4.1 in]	DM70: 142 mm [5.6 in]	DM70: 283 mm [11 in]
DM72: 24 mm [0.94 in]	DM72: 45 mm [1.8 in]	DM72: 58 mm [2.3 in]	DM72: 68 mm [2.7 in]	DM72: 113 mm [4.4 in]	DM72: 151 mm [5.9 in]	DM72: 301 mm [12 in]

Vertical Field of View values

1	2	3	4	5	6	7
DM70: 14 mm [0.55 in]	DM70: 27 mm [1.1 in]	DM70: 34 mm [1.3 in]	DM70: 41 mm [1.6 in]	DM70: 68 mm [2.7 in]	DM70: 90 mm [3.5 in]	DM70: 180 mm [7.1 in]
DM72: 18 mm [0.71 in]	DM72: 34 mm [1.3 in]	DM72: 43 mm [1.7 in]	DM72: 51 mm [2.0 in]	DM72: 85 mm [3.3 in]	DM72: 113 mm [4.4 in]	DM72: 226 mm [8.9 in]


Device	Distances in mm/ 2D min. code 16 mm lens		Distances in mm/ 1D min. code 16 mm lens	
	80	3 MIL	80	2 MIL
150	150	5 MIL	150	3 MIL
	190	6 MIL	190	4 MIL
	225	7 MIL	225	4 MIL
	375	12 MIL	375	5 MIL
	500	15 MIL	500	10 MIL
	1000	25 MIL	1000	15 MIL

Device	Distances in mm/ 2D min. code 16 mm lens		Distances in mm/ 1D min. code 16 mm lens	
DM152	80	2 MIL	80	2 MIL
	150	3 MIL	150	2 MIL
	190	4 MIL	190	2 MIL
	225	4 MIL	225	3 MIL
	375	7 MIL	375	4 MIL
	500	10 MIL	500	6 MIL
	1000	20 MIL	1000	15 MIL

Connecting the Reader

Perform the following steps:

1. Connect the breakout cable (standard CAT5/5e, SF/FTP or S/FTP cable).
2. Connect the reader to the PC using either the DM100-USB-000 or the DM100-RS232-000 cable. Connect a power supply: DM100-PWR-00 (optional with USB, required with RS-232).

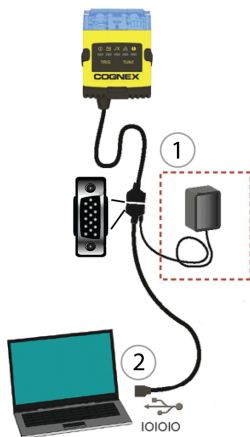

For information on the pinout and wire colors, see section *Connections, Optics and Lighting* in the *DataMan 150 Reference Manual*.

Installation

Installation procedures and specifications are presented in detail in the *DataMan® 150 Reference Manual*, which is installed with the DataMan Setup Tool. From the Windows Start menu, select the following to access the manual: *All Programs > Cognex > DataMan Software vx.x.x > Documentation*.

Note:



- Cables are sold separately.
- If a standard component is missing or damaged, immediately contact your Cognex Authorized Service Provider (ASP) or Cognex Technical Support.




CAUTION: All cable connectors are keyed to fit the connectors on the reader. Do not force the connections or damage may occur.

Mounting

Mounting the DataMan 150 at a slight angle (15°) can reduce reflections and improve reader performance.

Use the set of mounting holes on the rear part to mount the DataMan reader.

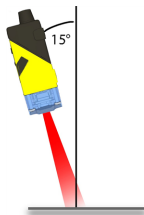

Connect the Breakout Cable



Note: You can clip unused wires short or use a tie made of non-conductive material to tie them back.

1. Verify that the 24VDC power supply is unplugged and not receiving power.
2. Connect a cable with RS-232 or USB and flying leads to the cable that is attached to the DataMan device.
3. Attach the Breakout cable's +24VDC and GROUND to the corresponding terminals on the power supply.



CAUTION: Never connect voltages other than 24VDC. Always observe the polarity shown.

4. Restore power to the 24VDC power supply and turn it on if necessary.

Install Software and Documentation and Connect the Reader

Follow the steps below to connect your reader to power and network:

1. Connect the I/O+RS232+24V cable to the cable attached to your reader.
2. Connect the cable to a 24V power supply.

To configure a DataMan 150 reader, the DataMan Setup Tool software must be installed on a networked PC. The DataMan Setup Tool is available from the DataMan support site: <http://www.cognex.com/support/dataman>.

1. After installing the software, connect the DataMan 150 Series reader to your PC.
2. Launch the DataMan Setup Tool and click **Refresh**.
3. Select your DataMan 150 reader from the list and click **Connect**.

DataMan 150 Specifications

Weight	128 g			
Operating Temperature	0°C — +40°C (+32°F — +104°F)			
Storage Temperature	-10°C — +60°C (+14°F — +140°F)			
Maximum Humidity	<95% (non-condensing)			
Environmental	IP65			
Shock and Vibration	IEC 60068-2-27: 1000 shocks, semi-sinusoidal, 11g, 10ms IEC 60068-2-6: vibration test in each of the three main axis for 2 hours @ 10 Gs (10 to 500 Hz at 100m/s ² / 15mm)			
LED Safety	IEC 62471: Exempt risk group, no further labeling is required.			
RS-232	Rx/D, Tx/D according to TIA/EIA-232-F			
Codes	1-D barcodes: Codabar, Code 39, Code 128, and Code 93, Code 25, Interleaved 2 of 5, Pharma, GS1 DataBar, Postal, Code UPC/EAN/JAN, MSI 2-D barcodes: Data Matrix™ (IDMax and IDQuick: ECC 0, 50, 80, 100, 140, and 200) QR Code and microQR Code, RSS/CS, PDF 417, MicroPDF 417, AztecCode, DotCode, MaxiCode			
Discrete I/O operating Limits	HS Output 0, 1 Input 0 (Trigger) Input 1	I_{MAX} R_{MAX} V_{IH} V_{IL} I_{TYP}	@ 24 VDC @ 12 VDC @ 24 VDC ± 15 — ± 25 V 0 — ± 5 V @ 12 VDC @ 24 VDC	100 mA 200 Ω 500 Ω 3.6 mA 7.5 mA
Power Supply Requirements	Options: <ul style="list-style-type: none"> • USB powered: 500 mA (2.5 W maximum) • External power supply: +5 — +26 VDC Recommended: 24 VDC (1 A maximum at 24 V, 4.5 W average at 24 V) Supplied by LPS or NEC class 2 only			
Power Consumption	<2.5 W (powered over USB) <4.5 W (average, externally powered at +24 V)			

DataMan 150 Series Imager Specifications

Specification	DataMan 150 Imager	DataMan 152 Imager
Image Sensor	1/3 inch CMOS	1/3 inch CMOS
Image Sensor Properties	4.51 mm x 2.88 mm (W x H), 6.0 μ m square pixels	4.8 mm x 3.6 mm (W x H), 3.75 μ m square pixels
Image Resolution (pixels)	752 x 480	1280 x 960
Lens Type	S-mount 6.2 mm F:5 (with optional liquid lens) with IR blocking filter S-mount 16 mm F:7 (with optional liquid lens) with IR blocking filter	

LED Wavelengths

The following table shows LED types and the related wavelengths:

LED	λ [nm]
RED	617
RED HPIL	617
BLUE	470
WHITE	6500K (Color Temperature)
IR	850
IR HPIL	850
UV	365


Regulations/Conformity

The DataMan 150 Series has Regulatory Models 1AA3 and 1ABE and meets or exceeds the requirements of all applicable standards organizations for safe operation. However, as with any electrical equipment, the best way to ensure safe operation is to operate them according to the agency guidelines that follow. Please read these guidelines carefully before using your device.



Note: For the most current CE declaration and regulatory conformity information, see the Cognex support site: cognex.com/support.

Safety and Regulatory	
Manufacturer	Cognex Corporation One Vision Drive Natick, MA 01760 USA
USA	FCC 47 CFR Part 15 Subpart B, Class A This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.
Canada	ICES-003, Class A This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Safety and Regulatory	
Europe	<p>EN55022 (CISPR 22) Class A EN55024 EN60950</p> <p>This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take immediate measures. This equipment complies with the essential requirements of the EU Directive 2014/30/EU. Declarations are available from your local representative.</p> <p>The CE mark on the product indicates that the system has been tested to and conforms with the provisions noted within the 2014/30/EU Electromagnetic Compatibility Directive. For further information please contact: Cognex Corporation, One Vision Drive Natick, MA 01760 USA. Cognex Corporation shall not be liable for use of our product with equipment (i.e., power supplies, personal computers, etc.) that is not CE marked.</p>
Australia	C-TICK, AS/NZS CISPR 22 / EN 55022 for Class A Equipment
Korea	<p>KN22, KN24</p> <p>A급 기기(업무용 방송통신기 자재): 이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.</p> <p>Certificate number: MSIP-REM-CGX-DM150 MSIP-REM-CGX-DM152X</p>
Japan	<p>VCCI V-/2013.04 Class A</p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。</p> <p>VCCI—A</p> </div>
UL and cUL Statement	<p>UL and cUL listed: IEC 60950-1:2005 (2nd Edition); Am 1:2009 + Am 2:2013</p> <p> US</p>

For European Community Users

Cognex complies with Directive 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed.

In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You may also contact your supplier for more information on the environmental performance of this product.

中国大陆RoHS (Information for China RoHS Compliance)

根据中国大陆《电子信息产品污染控制管理办法》(也称为中国大陆RoHS), 以下部份列出了本产品中可能包含的有毒有害物质或元素的名称和含量。



Table of toxic and hazardous substances/elements and their content, as required by China's management methods for controlling pollution by electronic information products.

	Hazardous Substances 有害物质					
Part Name 部件名称	Lead (Pb) 铅	Mercury (Hg) 汞	Cadmium (Cd) 镉	Hexavalent Chromium (Cr (VI)) 六价铬	Polybrominated biphenyls (PBB) 多溴联苯	Polybrominated diphenyl ethers (PBDE) 多溴二苯醚
Regulatory Models 1AA3, 1ABE	X	O	O	O	O	O
<p>This table is prepared in accordance with the provisions of SJ/T 11364. 这个标签是根据SJ/T 11364 的规定准备的。</p> <p>O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572 - 2011. 表示本部件所有均质材料中含有的有害物质低于GB/T 26572 - 2011 的限量要求。</p> <p>X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572 - 2011. 表示用于本部件的至少一种均质材料中所含的有害物质超过GB/T 26572 - 2011 的限制要求。</p>						

Copyright © 2020
Cognex Corporation. All Rights Reserved.